

Ademco Vista 15 / First Alert 148 C

Zones - 32 Total, 8 to 14 Hardwired, up to 26 Wireless

Wireless - Yes

Batteries - 12 volt Rechargeable inside main Panel, AC Transformer 16 volts

Door/Windows	3-Volt Lithium
Motion Sensor	2 3-Volt Lithium
Smoke Detector	2 9-volt Alkalines
Remote Keypads	3-Volt Lithium
Keyfobs	3-Volt Lithium
Remote Panics	9-Volt Lithium

Downloadable - Yes

Partitions- 1

Panic Buttons - Police Panic - * and #

Fire Panic - 1 and *

Medical Panic - 3 and #

Status - Press * if keypad shows NOT READY to view open zones

Arm Away - 4-digit code + 2 (AWAY) to arm everything

Arm Stay - 4-digit code + 3 (STAY) to arm all but motions

Instant Arm - 4-digit code + 7 (INSTANT), this also bypasses motions

Max Arming - 4-digit code + 4 (MAX) and everything arms instant

Disarm - 4 digit code + 1 (OFF)

Silence Alarm - 4-digit code + 1 (OFF) twice to turn off siren and reset display (If code is entered wrong, wait 2 or 3 seconds then try again)

Bypass - 4-digit code + 6 (BYPASS) + zone (01, 02 03 etc)
(keypad will beep, BYPASS + Zone should show, arm system)

Alarm Memory - There is no alarm memory

Reset Smoke - 4-digit code + 1 (OFF) twice to turn off siren and reset smoke (If this does NOT reset smoke detector set for service, smoke is bad)

Door Chimes - 4-digit code + 9 (CHIME)

Quick-Arm # + 2 for AWAY, # + 3 for STAY

Voice Keypads

Voice Chime # + 0 + 2 + 4 to Enable or Disable (Keypad should say "ON" or "OFF")

Show Status - # + 0 + *

Show Faults - Press * *

Record 1. Press # + 0 + 1 (LED turns ON)

Message 2. Record message up to 2.5 minutes

3. Press 1 to end (LED begins FLASHING)

Play 1. Press # + 0 + 3

Message 2. Recorded message will play (LED turns OFF)

Adjust Volume - Press # + 0 + 2 then press 3 or 6 to raise or lower volume

Activate Relay - 4-digit Code + # + 7 + Device/Relay (01 to 04)

Deactivate Relay - 4-digit Code + # + 8 + Device/Relay (01 to 04)

Test Sensors - 4-Digit Code + 5 (TEST)

Keypad will beep every 3 minutes

Open sensors and keypad will sound

End test with 4-digit Code + 1 (OFF) key

(Wireless motions require no movement for 4 minutes prior to testing)

View Time/Date Master Code + # + 63 (Stays On for 30 seconds)

Set Time/Date 1. Master Code + # + 63

2. Press * within 30 seconds

3. Enter 2-digit Hour (00 to 12)

4. Enter 2-digit Minute (00 to 59)

5. Press 1 for PM, press 2 for AM

6. Enter last 2 digits of Year (01 to ??)

7. Enter 2-digit Month

8. Enter 2-digit Day

9. Press * to exit or wait 10 seconds

Pager Signals - Alarm sends Account + 911 + 3 digit Zone

Open sends - Account + 001 + 3 digit User

Close sends - Account + 002 + 3 digit User

Trouble sends - Account + 811 + 3 digit Zone